
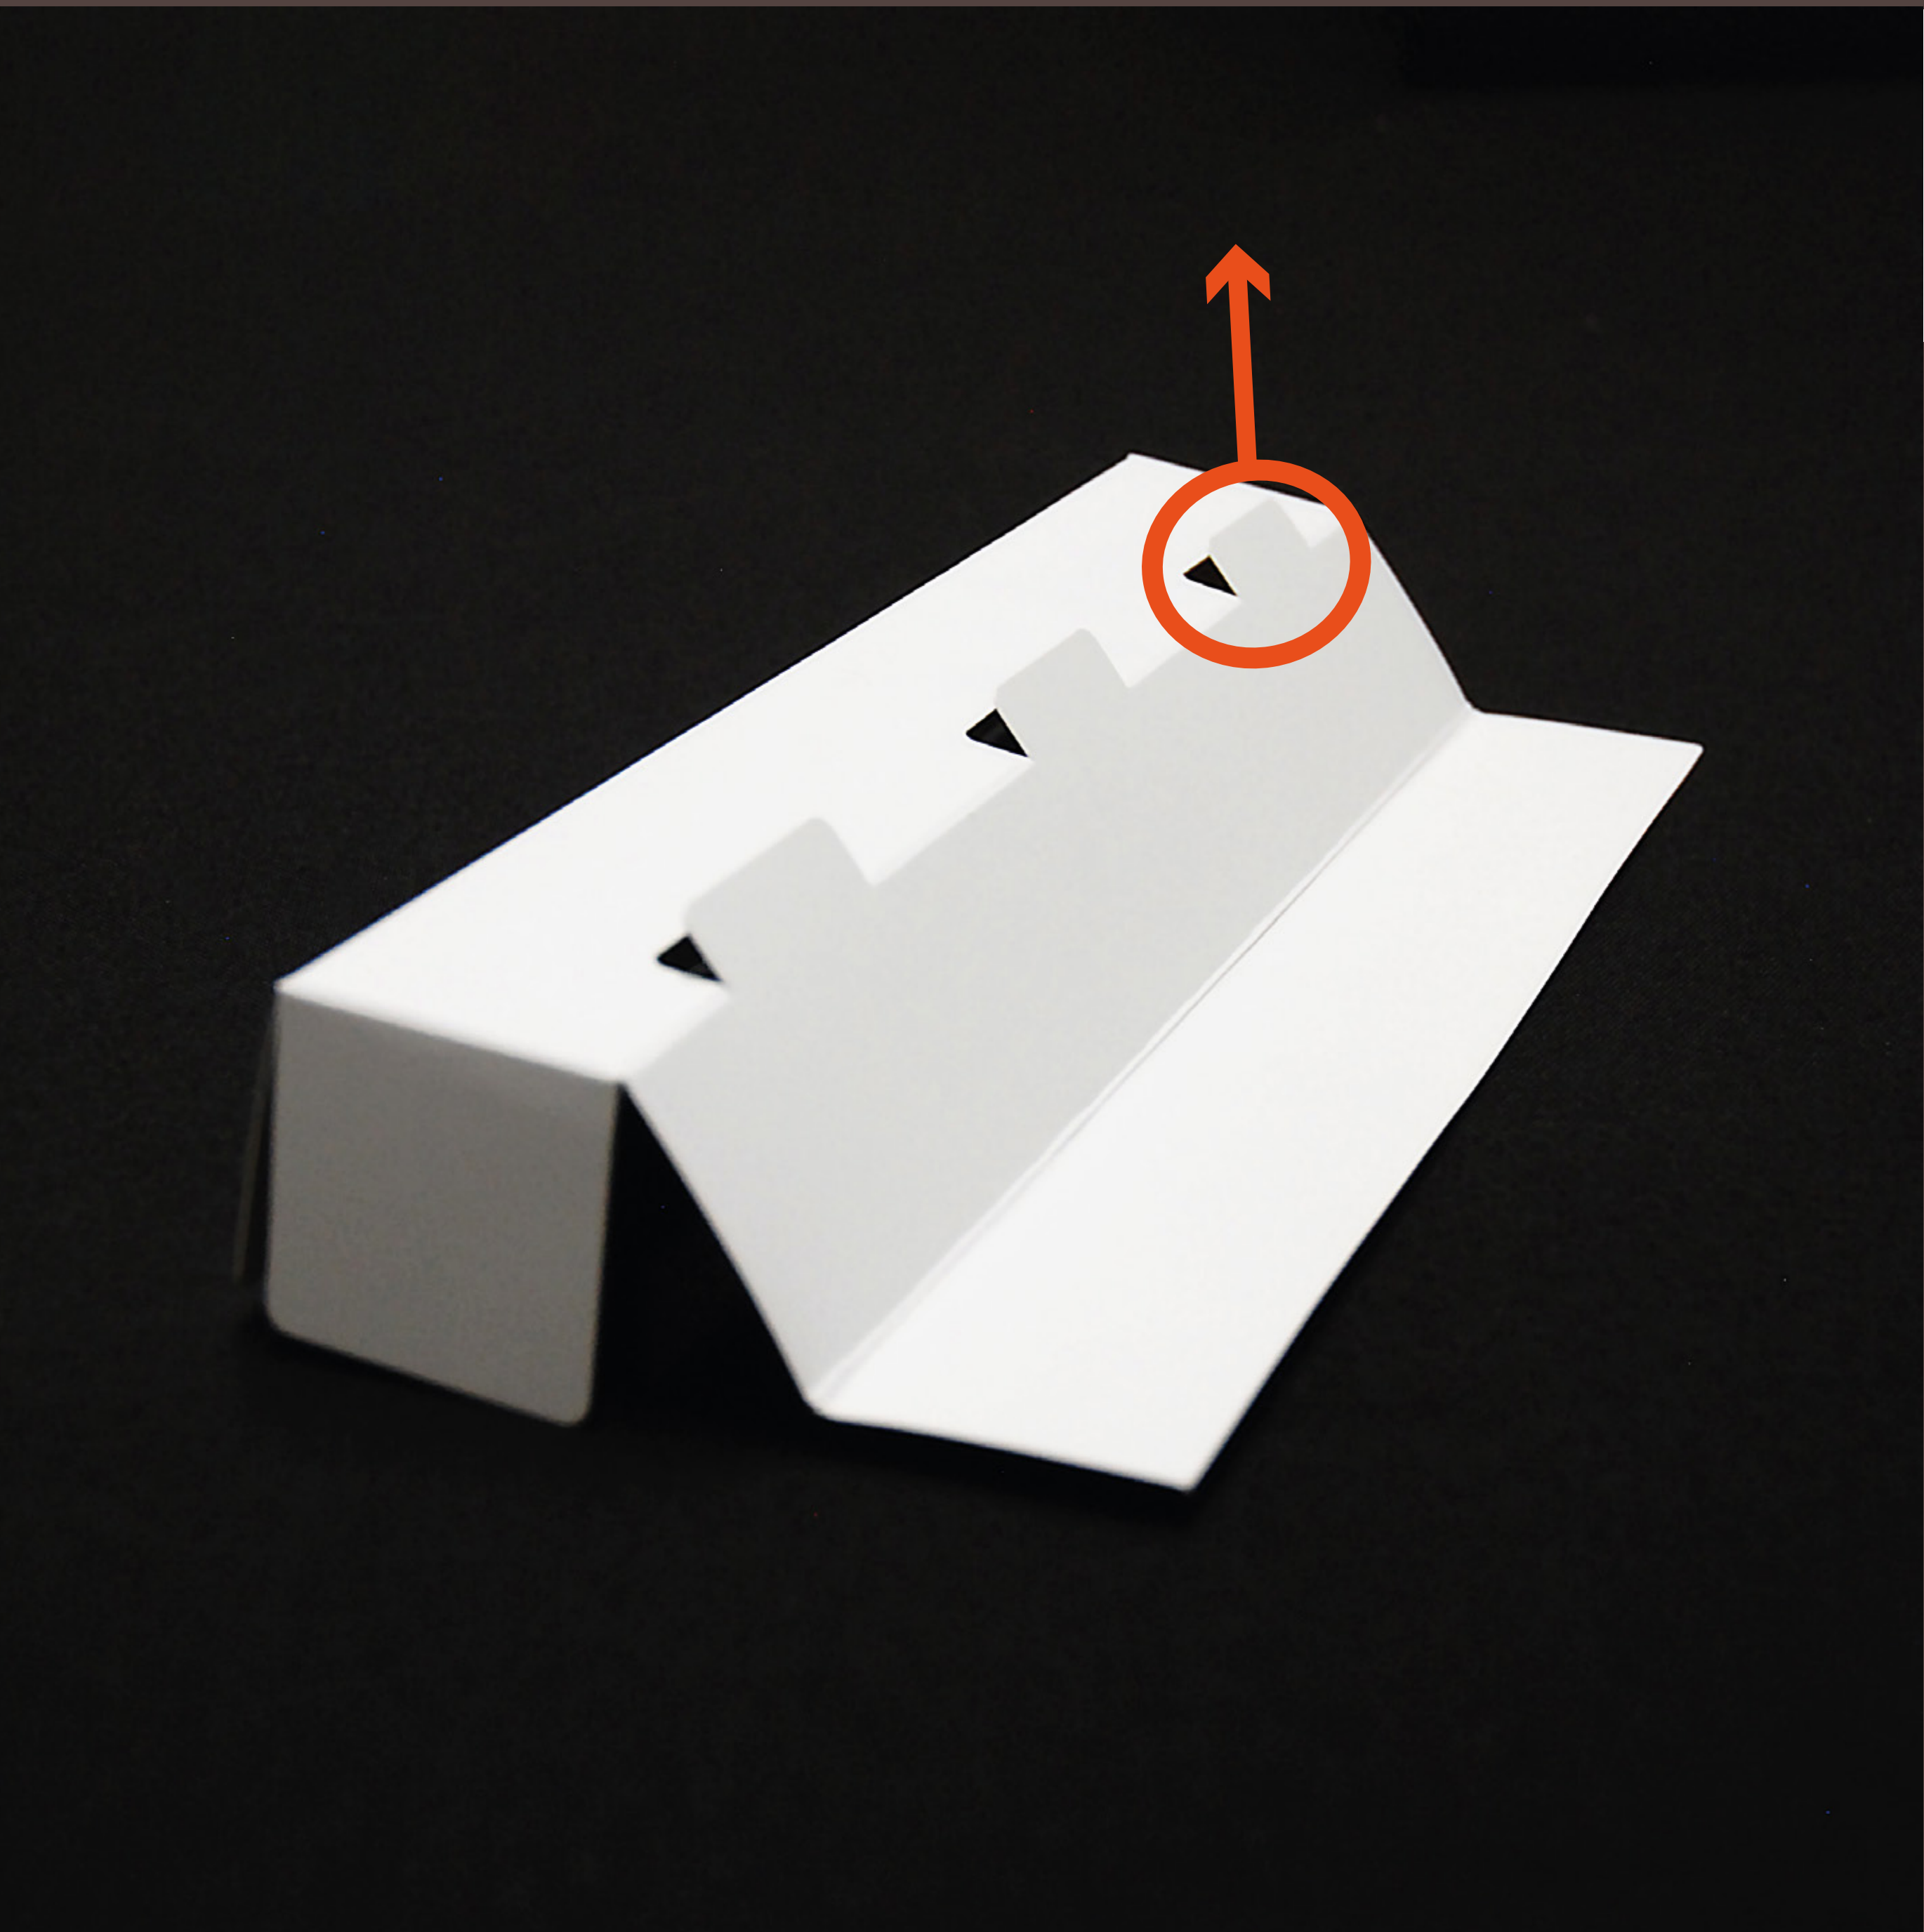
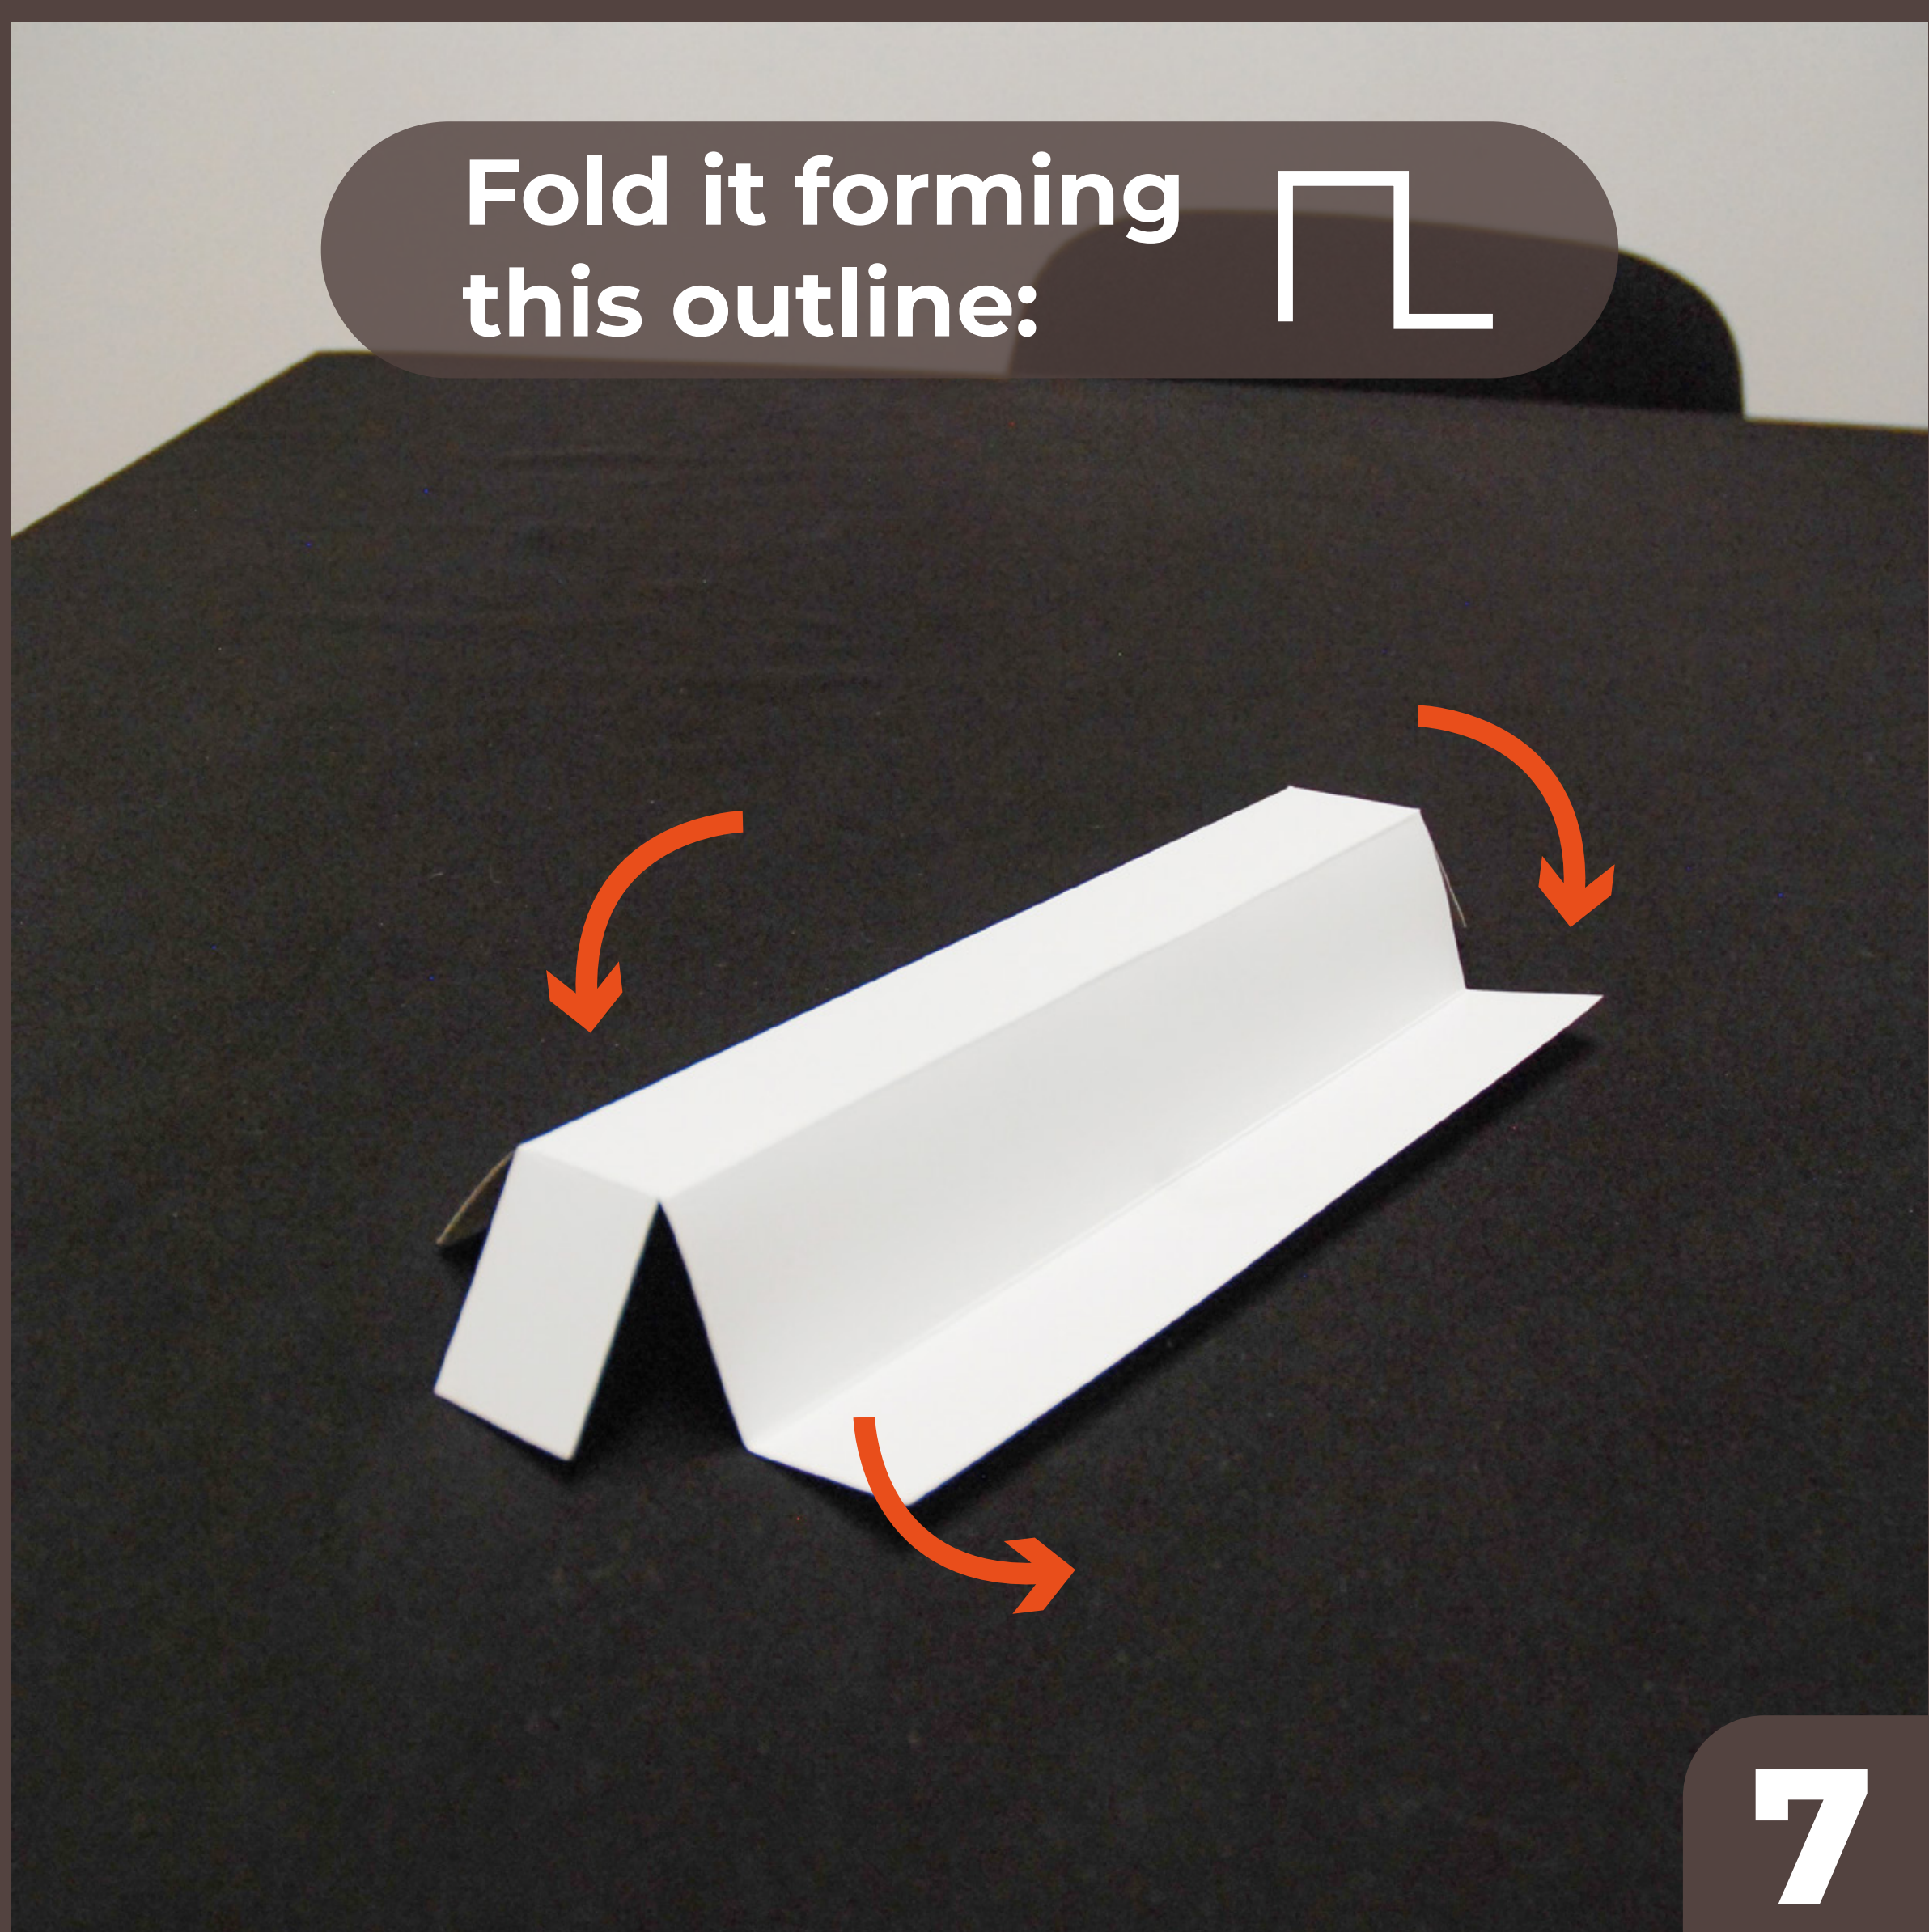


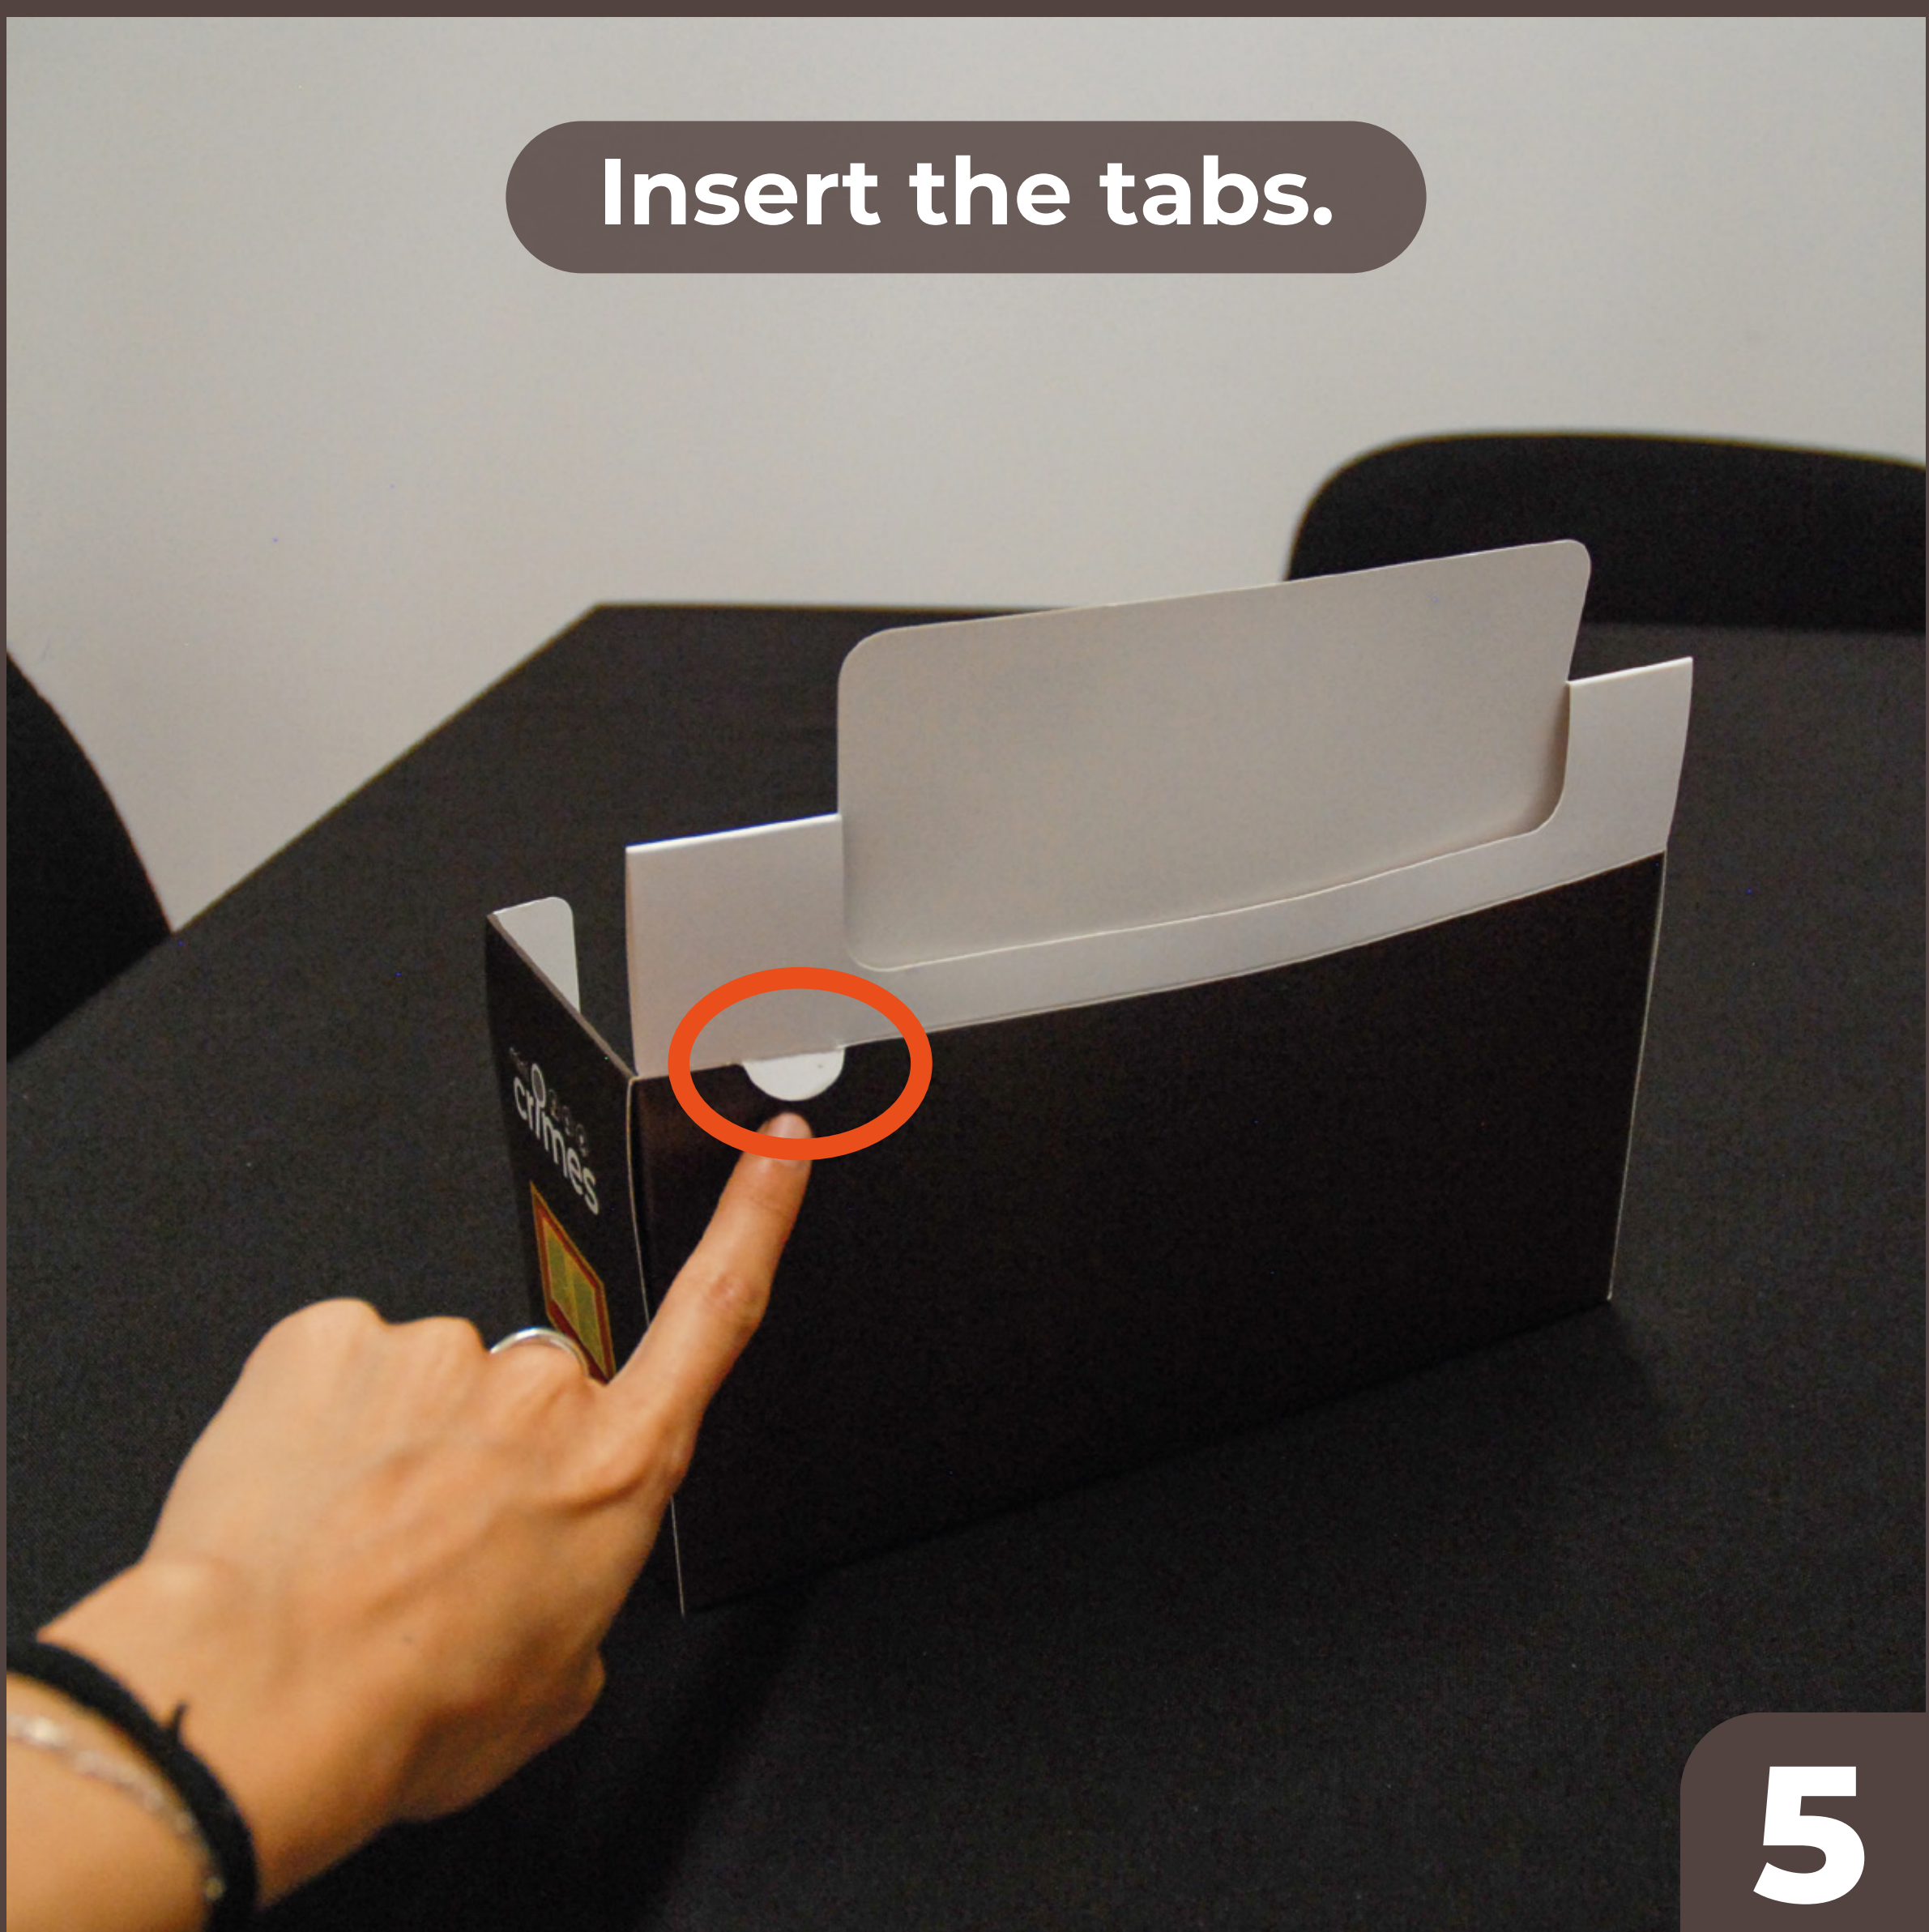

Please note: there are two different versions of the paper step!

If the step has three tabs, place it in the display stand, making sure that the tabs are positioned as shown in the image on the left. The tabs prevent the games from falling out as the display stand empties.